 
 


Inverter Analyzer RSUK0917


Compatible with all models of inverter products.
(It can be used for air conditioners made by other manufacturers or non-airconditioning products.)

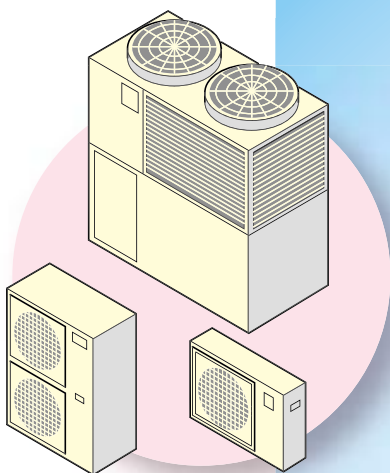

Any inverter model

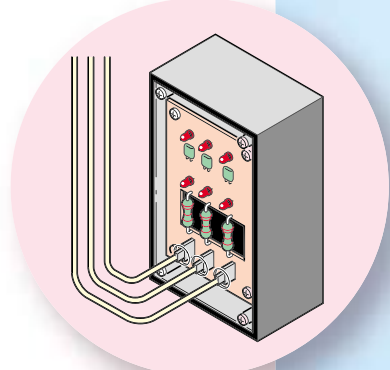

Quick connection

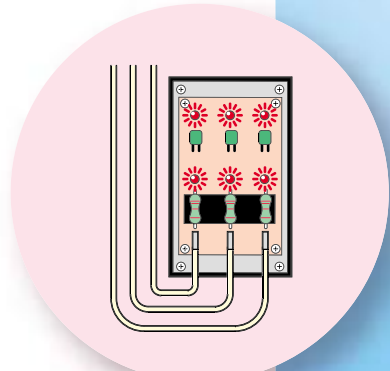

Easy Analysis



If an abnormal stop occurs during the compressor operation or at the start of compressor operation, it is difficult to judge whether the compressor has faulted or the PC board has faulted.

The Inverter Analyzer offers a function to easily pinpoint the specific cause of trouble, which can eliminate unnecessary replacement of parts.

Daikin Industries, LTD.
 After Sales Service Division

3-Step Startup

Step 1 : Turn the power supply off.

Step 2 : Disconnect compressor wire and connect the Inverter Analyzer.

(Do not connect the wire to the compressor at the same time, otherwise it may result in incorrect detection.)

Step 3 : Turn the power supply on and run the air conditioner.
Check if the LED is lit.

Easy Checkup

Check LED for turning on and off

When all LEDs are lit uniformly



Output from inverter board is OK

Lighting of the LED is unbalance.
(Some LEDs are not lit, others are still lit.)




Inverter output failure
(Electric failure on control board, inverter board, power transistor and so on.)

Easy diagnosis


Light weight and compact size

No additional power supply
or no battery is required

External Dimensions

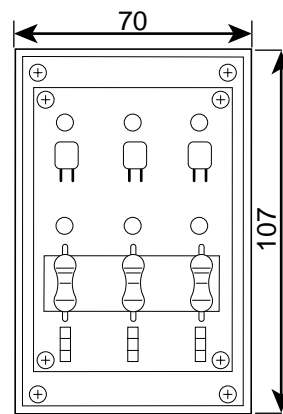

Weight: 83 g

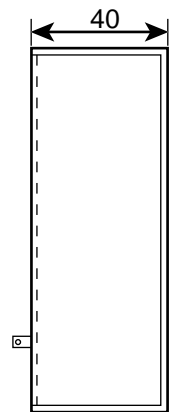

No individual power supply is required.

Product name	Part number	Standard F.O.B. price in Japan	Description
Inverter Analyzer	1368521	¥ 7,000	Operation Manual for Transmission Monitor Body (ENGLISH, CHINESE, JAPNESE)

Contact address:

Sakai spare parts center

Daikin Industries Ltd.
9 Ishizu-Nishi-Machi, Sakai, Osaka 592-8332, Japan
Tel: (072)241-9103 Fax: (072)243-1290

Europe spare parts center

Daikin Europe NV. Spare parts div.
Zandvoordestraat 300, 840 Oostende Belgium
Tel: (059)55 81 11 Fax: (059)55 88 99

Asia spare parts center

Daikin Asia Servicing Pte.Ltd. Spare parts div.
19 Loyang way #02-21, Singapore 508724
Tel: 546-8678 Fax: 546-9727